

# USER INSTRUCTIONS

 **BEACH  
WAGON  
STROLLERS**

Art.Nr. 3448205

## BEACHWAGON PUSH®



[www.beachwagonstrollers.com](http://www.beachwagonstrollers.com)

<b>CONTENTS</b>	2
<b>WARNINGS</b>	3
<b>MAINTENANCE &amp; REPAIR</b>	4
<b>MOUNTING &amp; REMOVING WHEELS</b>	5
<b>UNFOLDING</b>	6-7
<b>FOLDING</b>	8
<b>STORAGE</b>	9

## PLEASE READ BEFORE USING THE PRODUCT

-  **WARNING!** A child's safety is your responsibility.
-  **WARNING!** Read the instructions BEFORE use.  
Keep these instructions for future reference.
-  **WARNING!** Never leave a child unattended.  
It may be dangerous to leave your child unattended.
-  **WARNING!** This wagon is not intended for children under 3 years.
-  **WARNING!** Maximum load of the Beach Wagon PUSH® is 40 KG.  
Never overload.
-  **WARNING!** Never let a person stand in the wagon.
-  **WARNING!** This wagon is not suitable for running or skating.
-  **WARNING!** Assembly of the Beach Wagon PUSH® by adults only!
-  **WARNING!** This wagon should be used with caution, since skill is required  
to avoid falls or collisions causing injury to the user or third parties!
-  **WARNING!** Do not attach the wagon to any other vehicle, car, bicycle, motor or animal.  
Do not use on highway. Only use for walking. Maximum speed 10 KM per hour.
-  **WARNING!** Always use this wagon with care to avoid injury, falling and collision.
-  **WARNING!** Always divide the load evenly over the wagon.  
Overloading on one side might cause tilting of the wagon.
-  **WARNING!** When the wagon is used in the sun, there is a hazard of sun burn.  
Use sun protection for children.
-  **WARNING!** Keep flames and heat away from the wagon.
-  **WARNING!** This wagon requires regular maintenance by the user.  
See the maintenance instruction in this manual.
-  **WARNING!** Ensure that all accessories are engaged/constructed according  
the advised instructions in the manual of these accessories before use.
-  **WARNING!** To avoid injury ensure that your child is kept away from the wagon  
when unfolding and folding this wagon.
-  **WARNING!** Keep plastic covers and bags away from children to avoid suffocation  
and hazard.
-  **WARNING!** Children should be kept on a distance of moving parts while  
making adjustments.
- 

## **Regular maintenance extends life span of the Beach Wagon and reduces the chance of problems.**

Please have all minor repairs and maintenance done by a good bicycle shop or experienced bicycle repairer, and contact your dealer with any other problems or for parts needing to be repaired. Contact us at [support@bwstrollers.com](mailto:support@bwstrollers.com) or [www.beachwagonstrollers.com](http://www.beachwagonstrollers.com)

The high-quality materials used to make the Beach Wagon guarantee its long life span. When assembling the frame in the factory, no extra protective is applied to the parts. Premature damage to metal parts is prevented by cleaning the Beach Wagon regularly and treating all parts with acid-free vaseline or with the Teflon spray.

## **Extra maintenance is necessary when the Beach Wagon comes into contact with sand or salt.**

Salt should be rinsed off with clean water, and the parts coated with a protective layer in order to prevent damage to the steel parts. Take the wheels off and clean the axles with water. After cleaning make all parts dry. Please remember that if the Beach Wagon comes into contact with salt, this could penetrate into the metal tubes. To prevent excessive corrosion, tubes must be checked for damage and treated with a protective layer.

The covers are made of polyester and can be washed in the washing machine at a low temperature of 30 degrees Celsius. The polyester covers can be removed by opening the zippers and Velcro for inspection and maintenance.

## **Check before every use of the wagon.**


1. Check if all nuts and bolts are fastened securely. If necessary, tighten or loosen them.
2. Treat all moving parts with Vaseline or Teflon spray.
3. Check the cover and all other textile parts for damaged seams and/or zips.
4. Check the frame for damage and/or breaks.
5. Check all parts for damage/corrosion.  
If necessary clean the parts, and coat them with a protective layer.
6. Check the wheel bearings for corrosion. If necessary, remove the bearings from the wheel rim, clean them and apply a layer of vaseline.
7. Check whether the pull bar is well fastened and the upholding spring works well and is well fastened.
8. Repair or replace any damaged or worn parts.
9. Check if all four (4) wheels have been attached correctly and firmly.  
The push button must be fixed in the axle opening in order to hold the wheel.
10. The four (4) side panel clamps have been firmly fastened to prevent the panels from opening and to prevent the wagon from unintended folding.

## MOUNTING & REMOVING FRONT WHEELS

1.

### MOUNTING WHEELS

Align pin (A) with hole (B) and lock the wheel into position by pushing the wheel into the frame. Check proper locking by pulling wheel in direction (C).

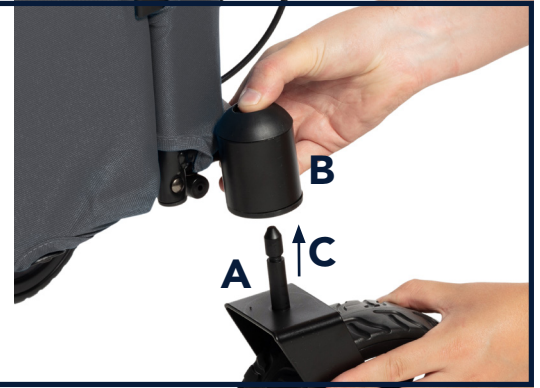

2.

### REMOVING WHEELS

Push button (A) and pull out wheel in the opposite direction of locking mechanism (B).




## MOUNTING & REMOVING REAR WHEELS

1.

### MOUNTING WHEELS


Slide wheel axle (A) completely into frame axle (B). Locking button (C) will automatically lock the wheel. Check proper locking by pulling wheel in direction (D).

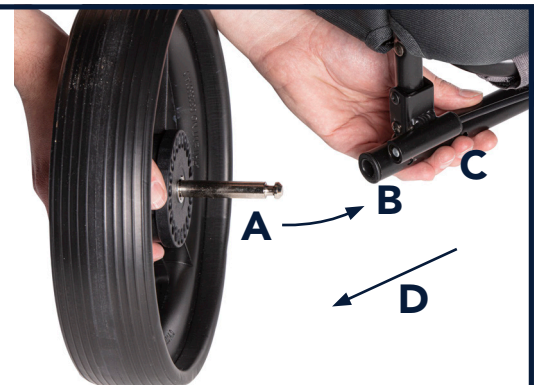

2.

### REMOVING WHEELS

Push button (A) and pull out wheel in outside direction of axle (B).

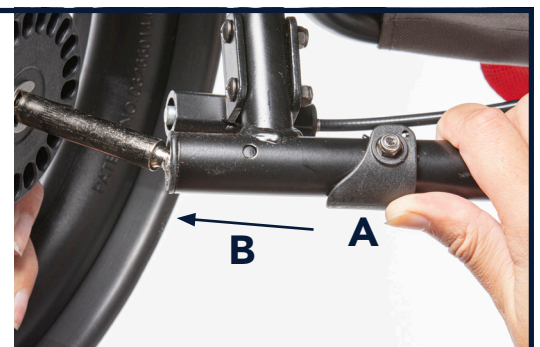

## UNFOLDING YOUR BEACH WAGON PUSH®

1.

### OPEN LOCK CLIP

Open the clip that holds the Beach Wagon body together. Watch your fingers!



2.

### OPEN FRONT AND REAR PANELS

Do NOT open by lifting push bar.  
Open by lifing the front and rear panels.

⚠ Beware the push bar does not hit your head!



3.

### OPEN THE CLAMPS

Put the 4 clamps in the open position.



4.

### OPEN SIDE PANELS

Open the side panels.  
Make sure clamps are open.



5.

## FIX SIDE PANELS


Fix the side panels by closing the 4 clamps.



6.

## UNFOLD PUSH BAR

Press both buttons to unfold the push bar.  
Push bar can be locked in various angles.

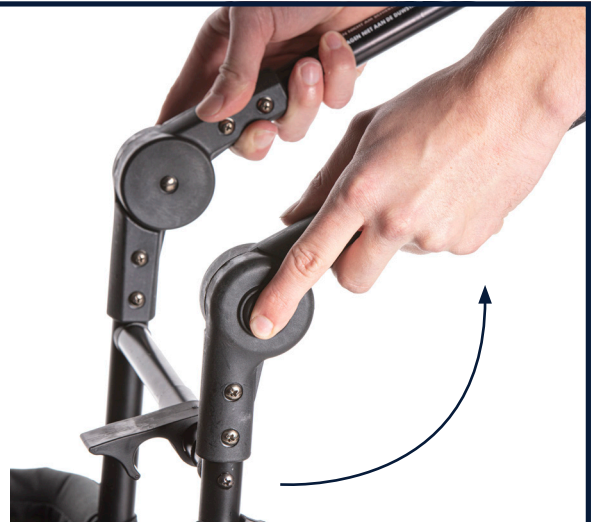

**READY TO GO!**



## FOLDING YOUR BEACH WAGON PUSH®

1.

### FOLD PUSH BAR

Press both buttons to fold the push bar.  
Make sure you fold the push bar in all the way.



2.

### OPEN CLAMPS

Open all 4 clamps by pulling them outwards.



3.

### FOLD SIDE PANELS

With all clamps unlocked, fold both left and right side panels inwards.



4.

### CLOSE CLAMPS

Bring the clamps in "close" position for flat folding.





5.

## FOLD FRONT AND REAR PANELS

Fold front and rear panel. No NOT fold by pull bar.  
Fold wagon by holding the front and rear panels.

 Beware the pull bar does not hit your head!



6.

## CLOSE LOCK CLIP

Close the clip that holds the Beach Wagon body together. Watch your fingers!



7.

## REMOVE WHEELS

Remove wheels for an even compacter form factor. Check page 5 for more info.



## STORE YOUR BEACH WAGON PUSH®

The best way to store a beachwagon is dry off the ground.  
Park the wagon frame on the floor or hang on the available wall hooks.

ENJOY YOUR NEW BEACHWAGON!





**BE SURE TO CHECK OUT OUR WIDE  
RANGE OF ACCESSOIRES!**



**AND MUCH MORE AT  
[WWW.BEACHWAGONSTROLLERS.COM](http://WWW.BEACHWAGONSTROLLERS.COM)**

## **CONTACT US!**



**BEACHWAGON Strollers BV**

Logistiekweg 18  
Oosterhout 4906 AB  
The Netherlands

T: +31 (0) 85 065 7371  
E: [support@bwstrollers.com](mailto:support@bwstrollers.com)  
I: [www.beachwagonstrollers.com](http://www.beachwagonstrollers.com)