

# Discmania Foldable Target Anleitung

Deutsch  
Zubehör



1. Fuß 1x



2. Korb 1x



3. Kranz 1x



4. Bolzen 3x



5. Schraube 1x

## Aufbauanleitung

Schritt 1: Den Fuß #1 auseinanderziehen, auf den Boden stellen und mit einem Bolzen #4 befestigen.




Schritt 2: Den Korb #2 in den Fuß stecken und öffnen. Anschließend mit einem Bolzen #4 befestigen.



Schritt 3: Den Kranz #3 in den Korb #2 stecken. Die beiden Stangen mit Schraube #5 befestigen. Anschließend den Kranz öffnen und mit einem Bolzen #4 befestigen.



 Schritt 4: Der Aufbau ist abgeschlossen, viel Spaß!



# Discmania Foldable Target Assembly Instructions

English  
**PARTS LIST**



1. Base 1pc



2. Basket 1 pc



3. Top 1 pc



4. Pin 3pcs



5. Screw 1pc

## **Assembly Instructions**

Step 1: Set up the base #1 and lock it with pin #4.



Step 2: Slide the basket #2 onto the base and open up the basket. After that lock it with pin #4.



Step 3: Slide the top #3 onto the basket #2. Tighten the top to middle pole with screw #5 and then open up the top. After that lock it with pin #4.



Step 4: Basket is now ready to be used!

