

Montageanleitung Einbaurahmen Sport-Thieme® Adventure-Tramp



Maße und Gewicht

- 200 x 300 x 60 cm, Feuerverzinkt
- 2 mm Materialstärke
- Gesamtgewicht: 20 kg

Benötigtes Material

- Gummihammer (nicht im Lieferumfang enthalten)
- 13er Gabelschlüssel (nicht im Lieferumfang ent.)
- 4x Spanschlösser
- 32x Schrauben und 32x Muttern
- 4x Rahmenteile
- 6x Selbstklebende Moosgummiplatten



1

- Rahmenteile verbinden.




2

- Moosgummi einsetzen. Sitzt satt. Vermeidet metallische Geräusche.



3

- Ketten einspannen (Feder und Spanschloss teilen sich eine Öse).

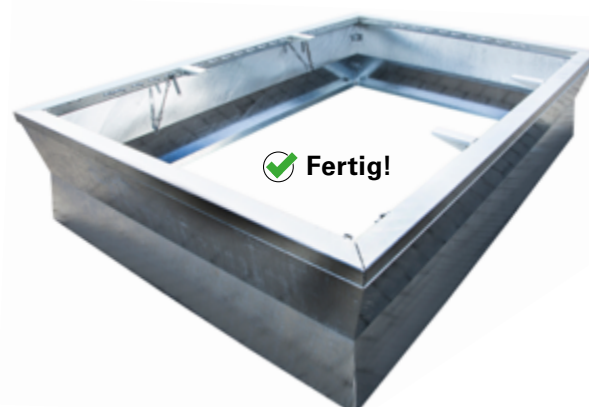

Den weiteren Aufbau des AdventureTramps entnehmen Sie bitte der entsprechenden Anleitung.

Instructions built-in frame Sport-Thieme® Adventure-Tramp



Measures and weight

- 200 x 300 x 60 cm, hot-dip galvanized steel
- Material thickness: 2 mm
- Total weight: 197 kg

Required material

- Rubber mallet (not in scope of delivery)
- 13 mm open-end wrench (not in scope of delivery)
- 4x Turnbuckles
- 32x screws and 32x nuts
- 4x Frame parts
- 6x Self-adhesive foam rubber sheets




- Connect frame parts.



- Place the foam rubber sheets. Fits closely. Avoids metallic noise.



- Grip chains (Spring and turnbuckle are sharing one lug).

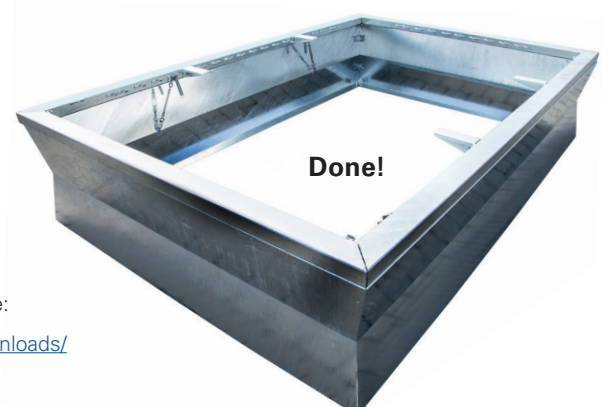

Please find the further instructions steps of the Adventure-Tramp here:

www.eurotramp.com/en/products/sport-thieme-adventure-tramp/downloads/